

somfy®


TaHoma® switch

Vodič za instalaciju



HR

# Dobrodošli!




Pokrenite TaHoma<sup>®</sup>  
prekidač u nekoliko jednostavnih koraka

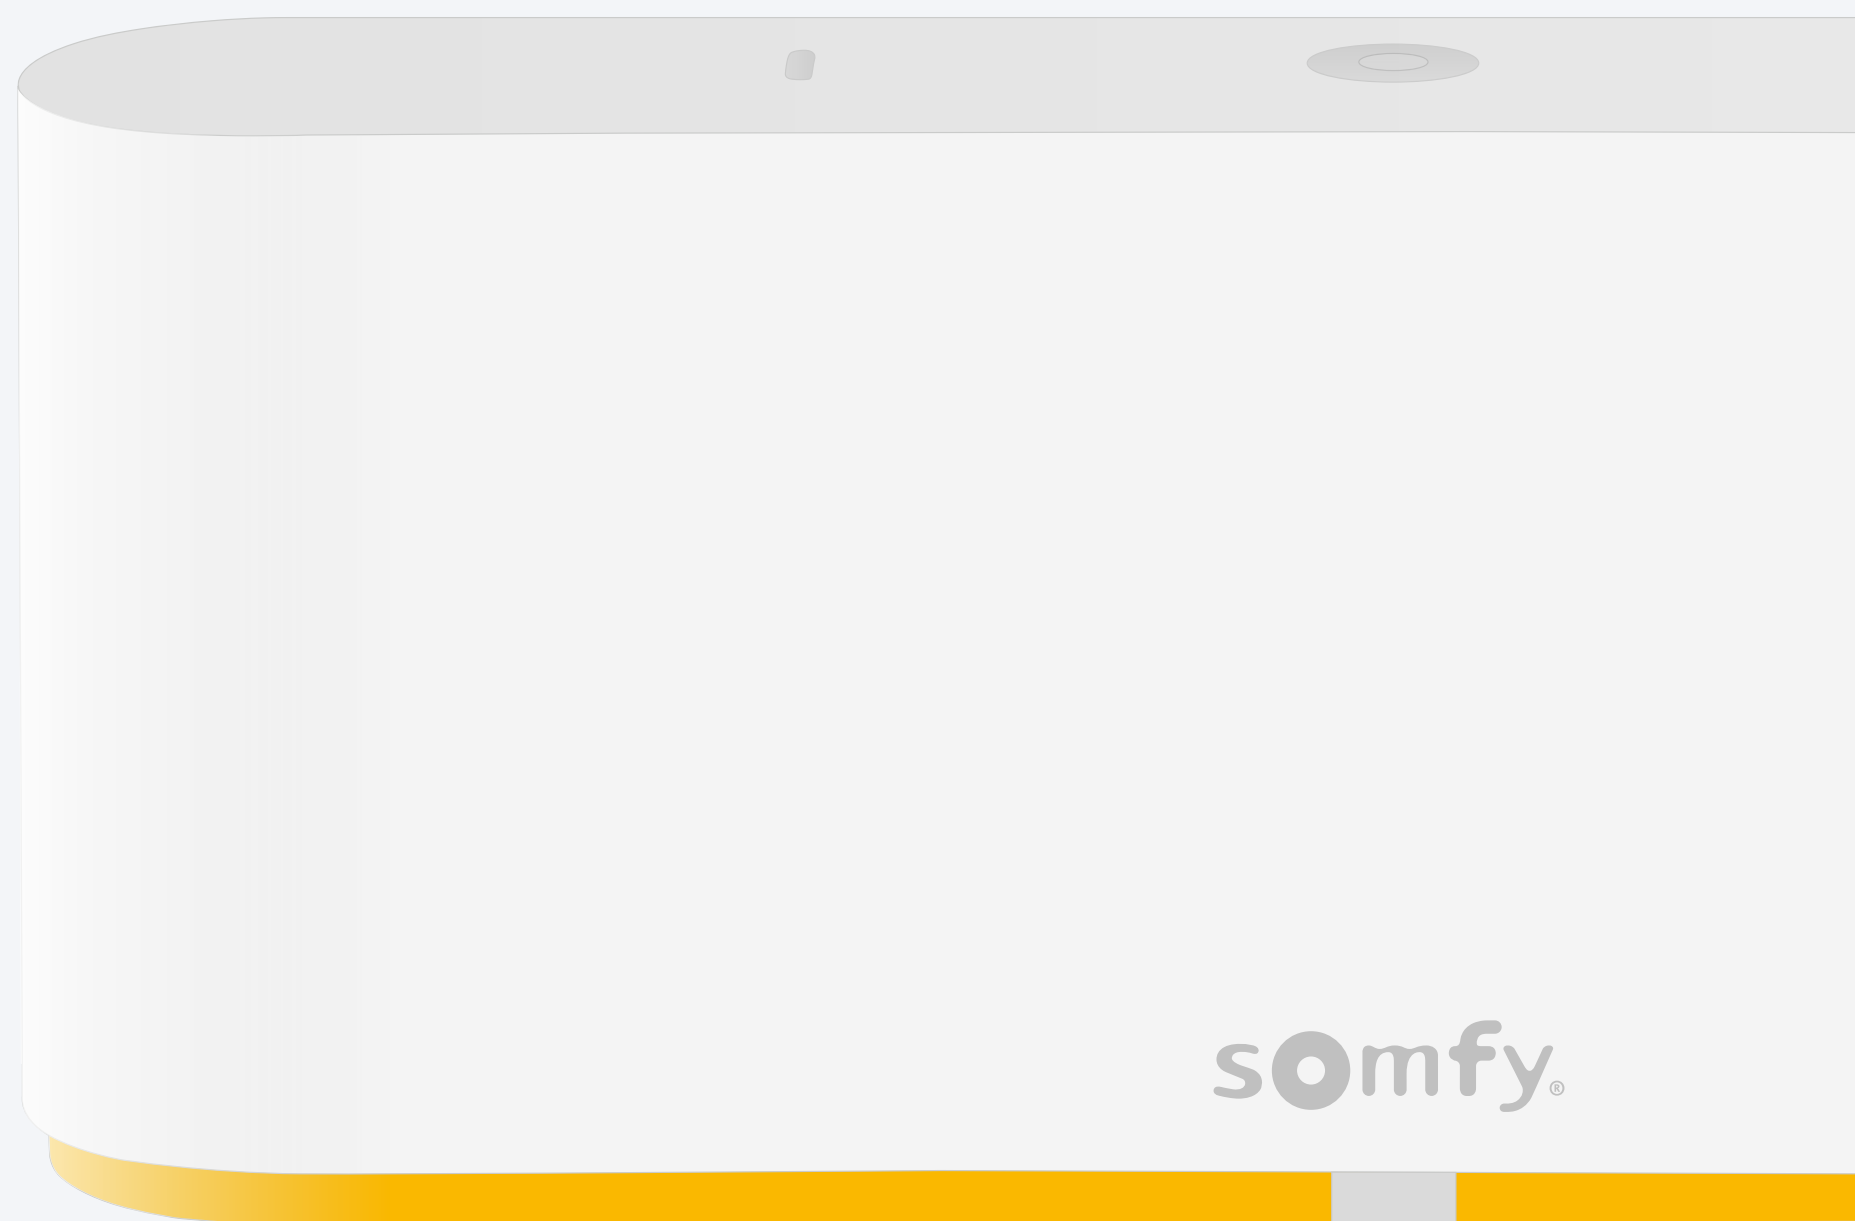

# Sadržaj pakiranja

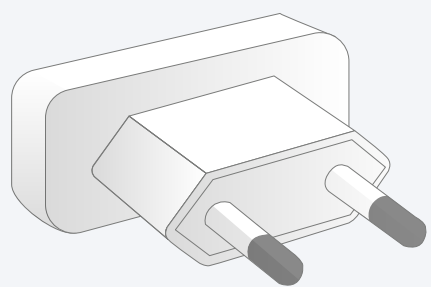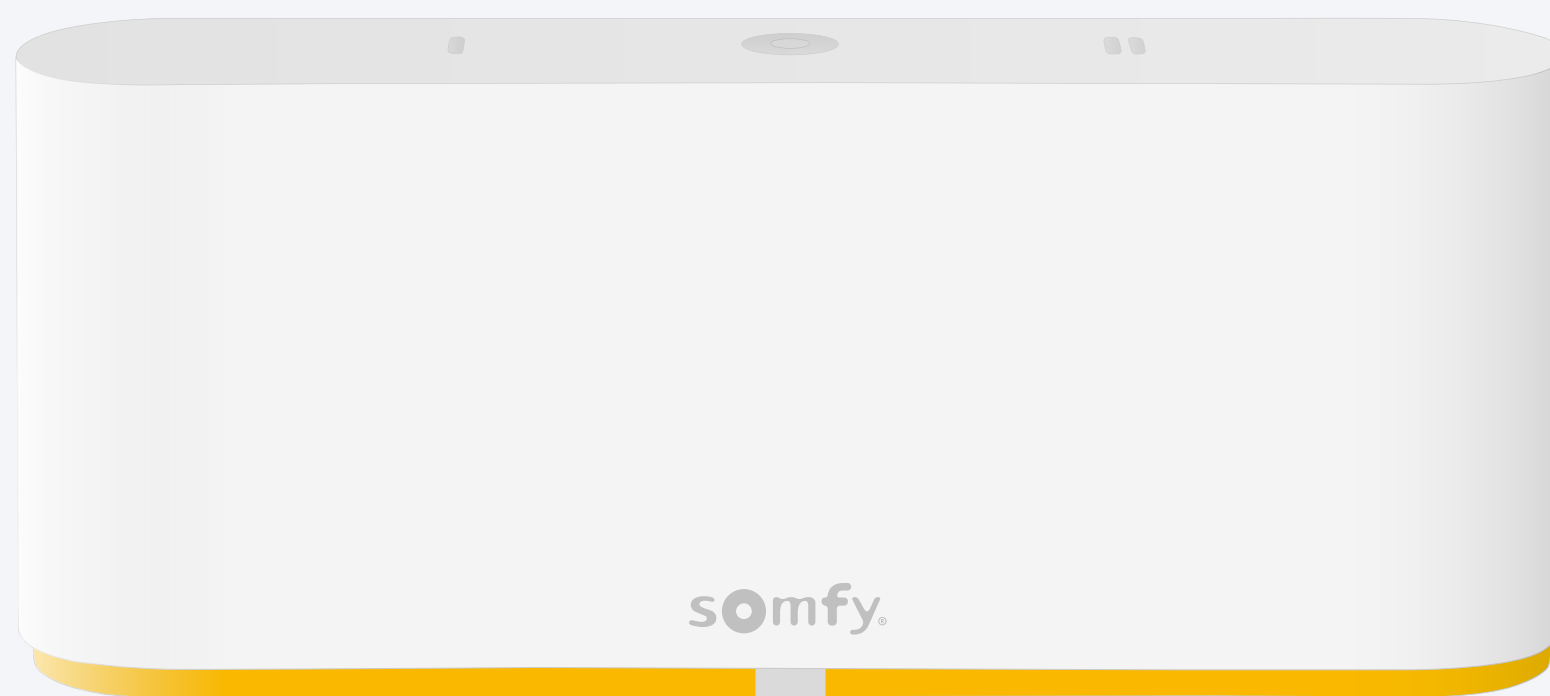

ili

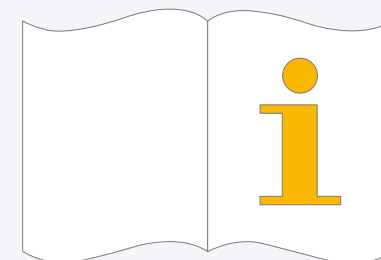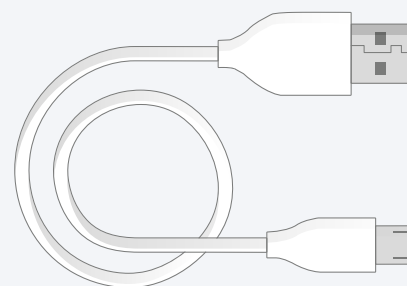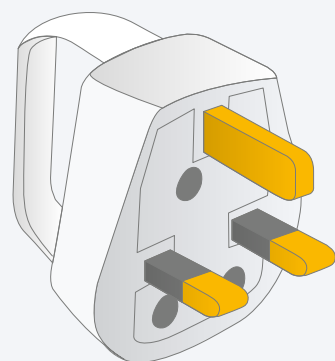

# Instalirajte aplikaciju TaHoma®




Slijedite upute

Aplikacija TaHoma®  
instalirana


1. Pokrenite aplikaciju TaHoma<sup>®</sup>

# Početak

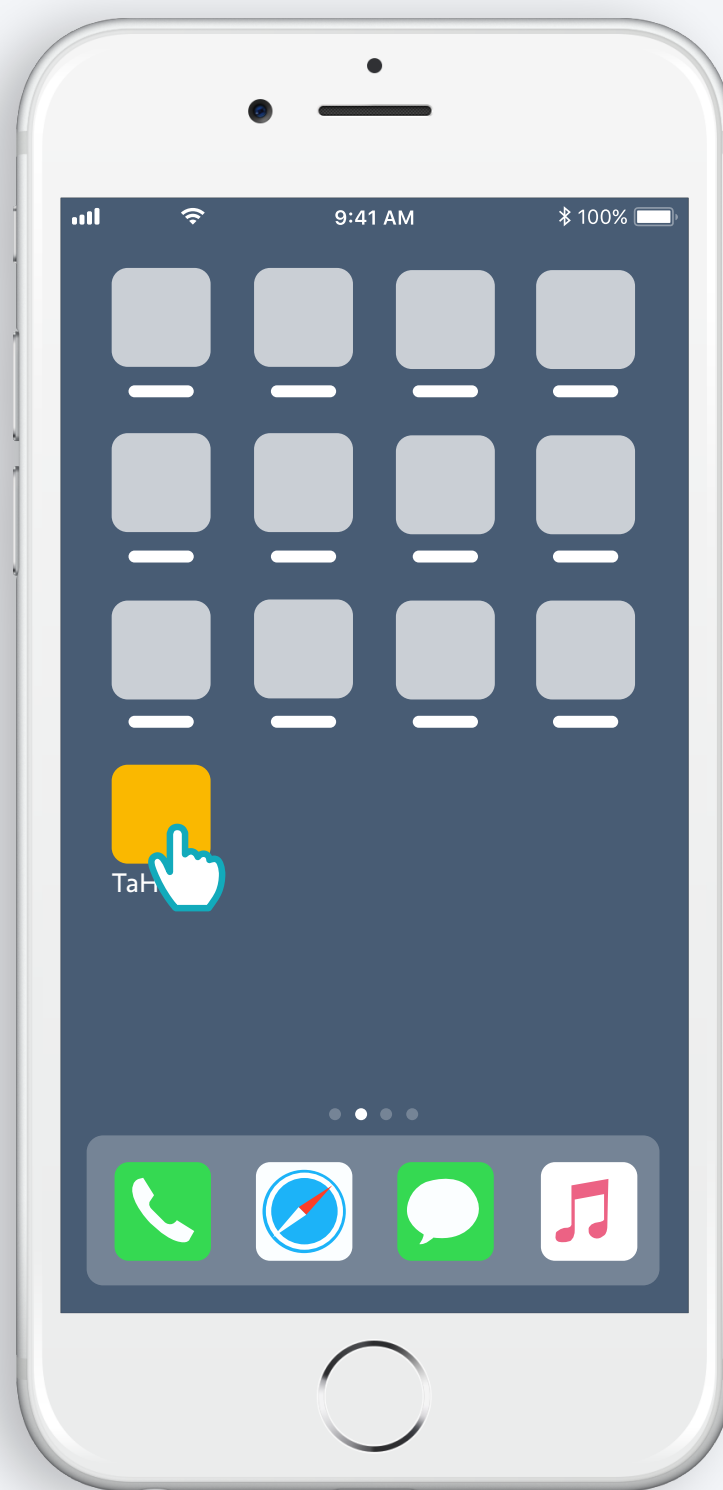


Otvorite aplikaciju TaHoma®

# Početak

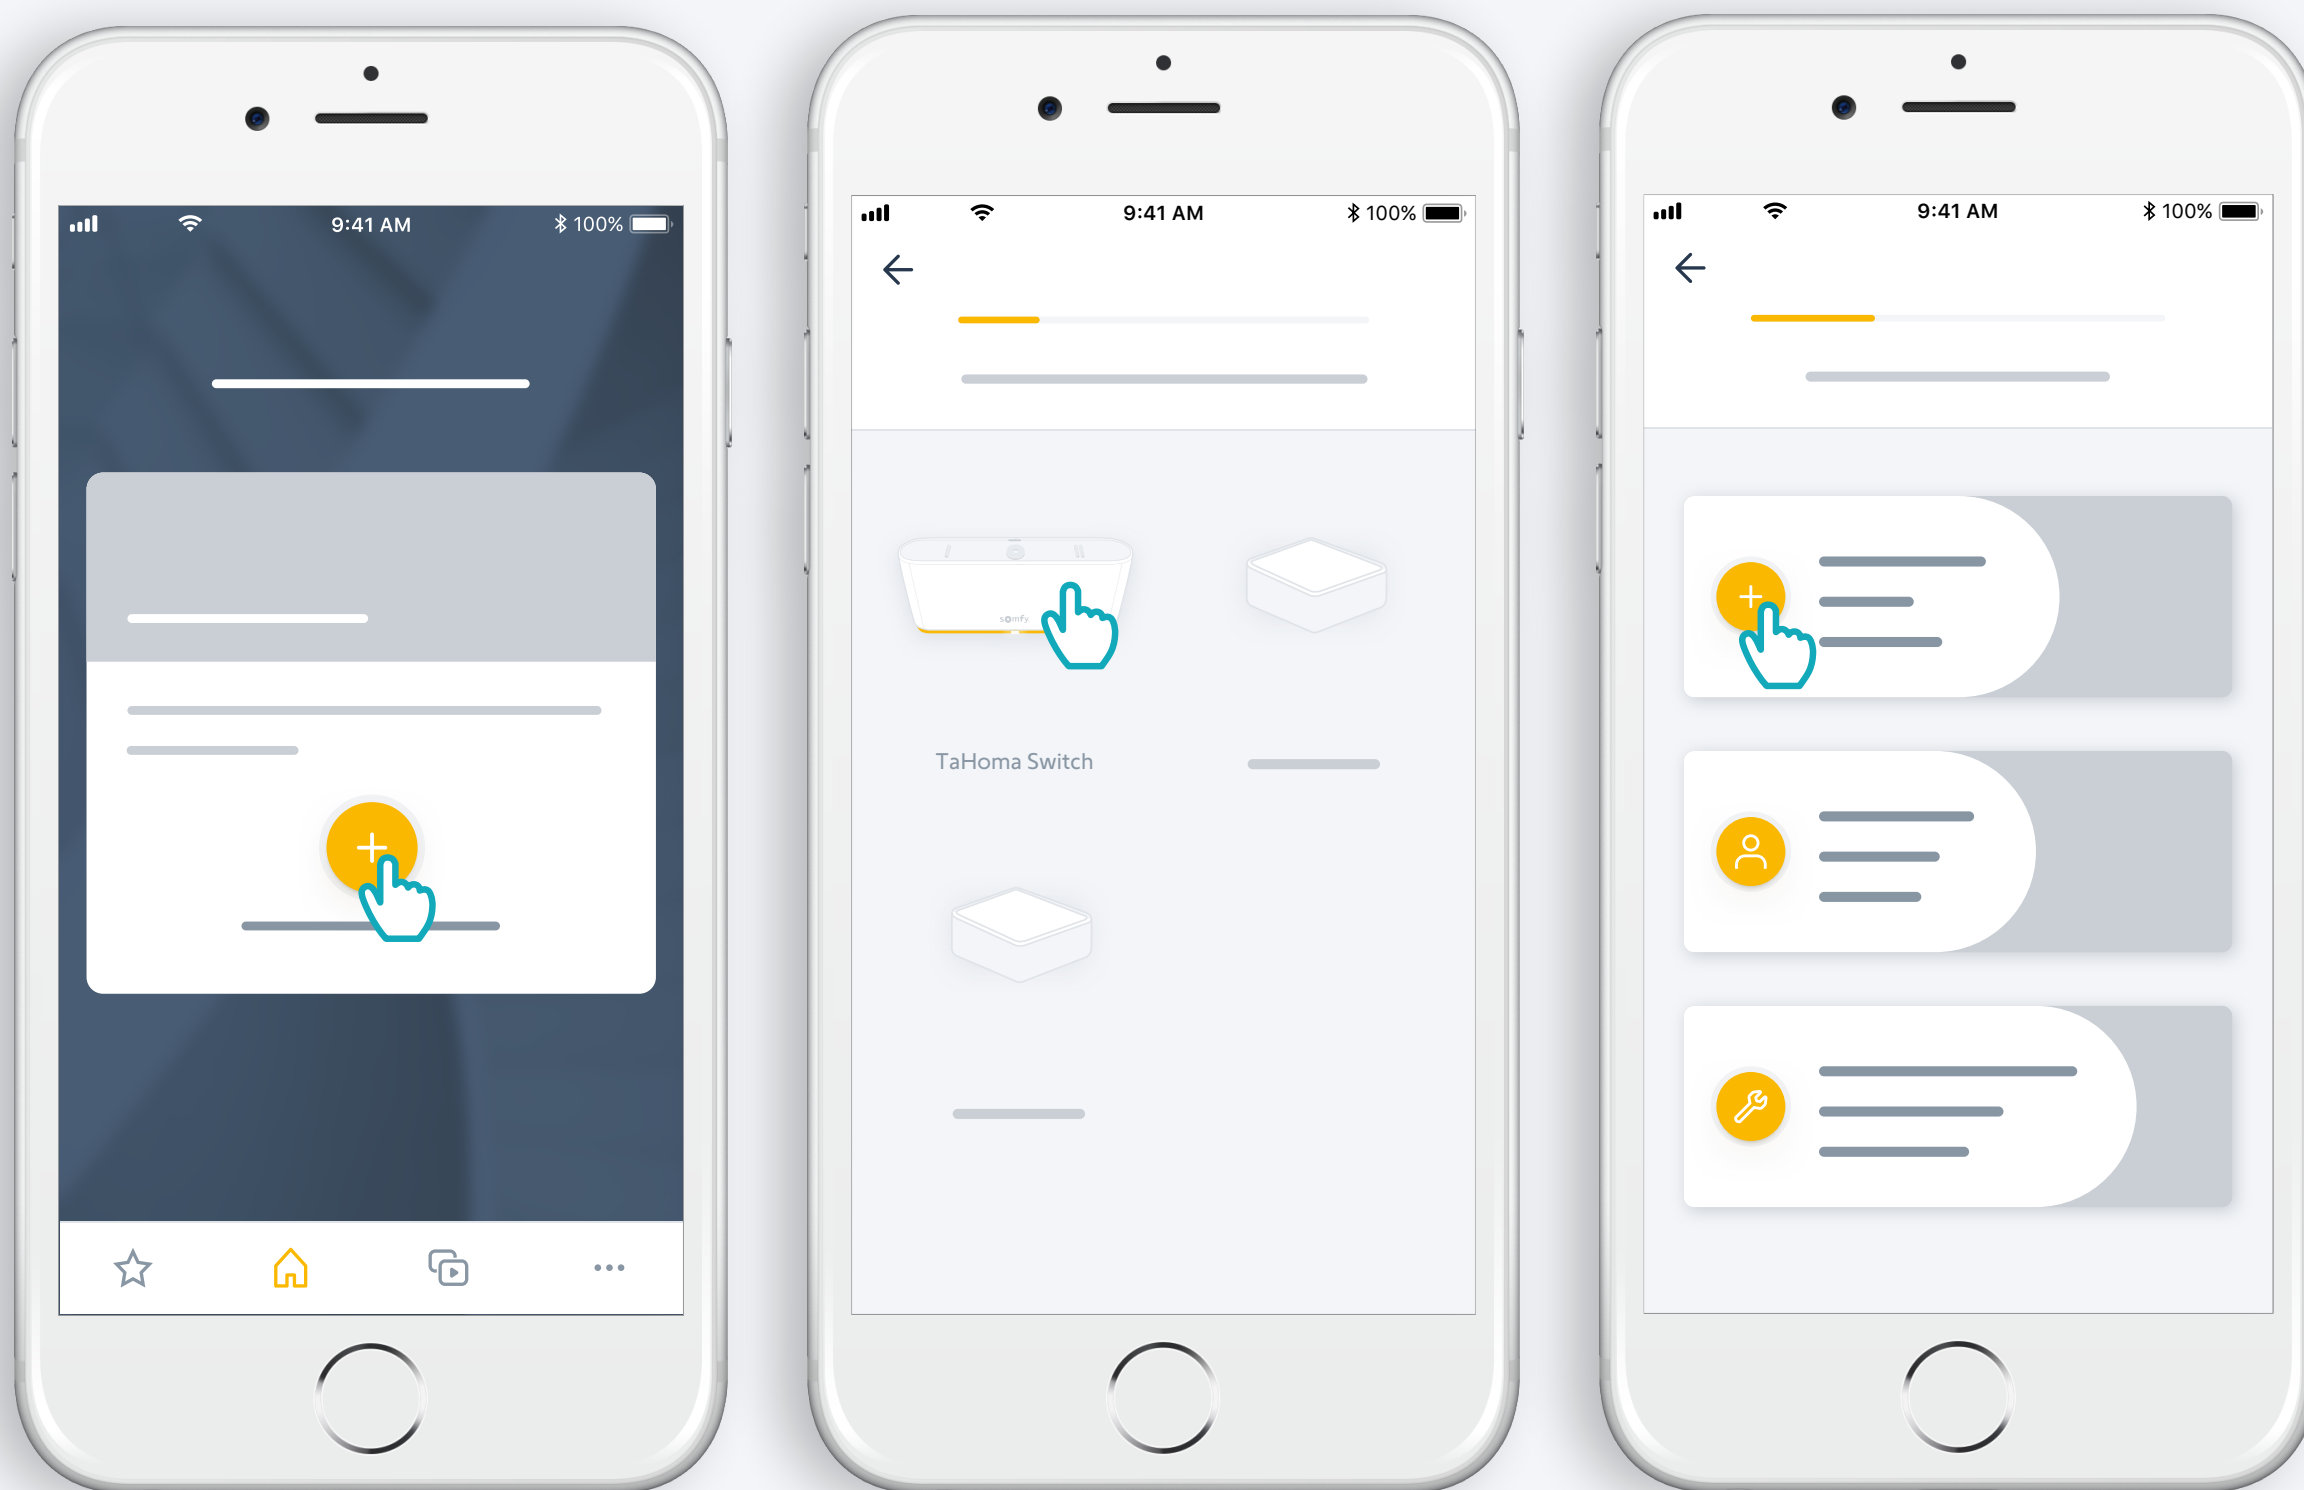


Pokrenite instalaciju prekidača TaHoma® Switch

# Priključite prekidač TaHoma® Switch

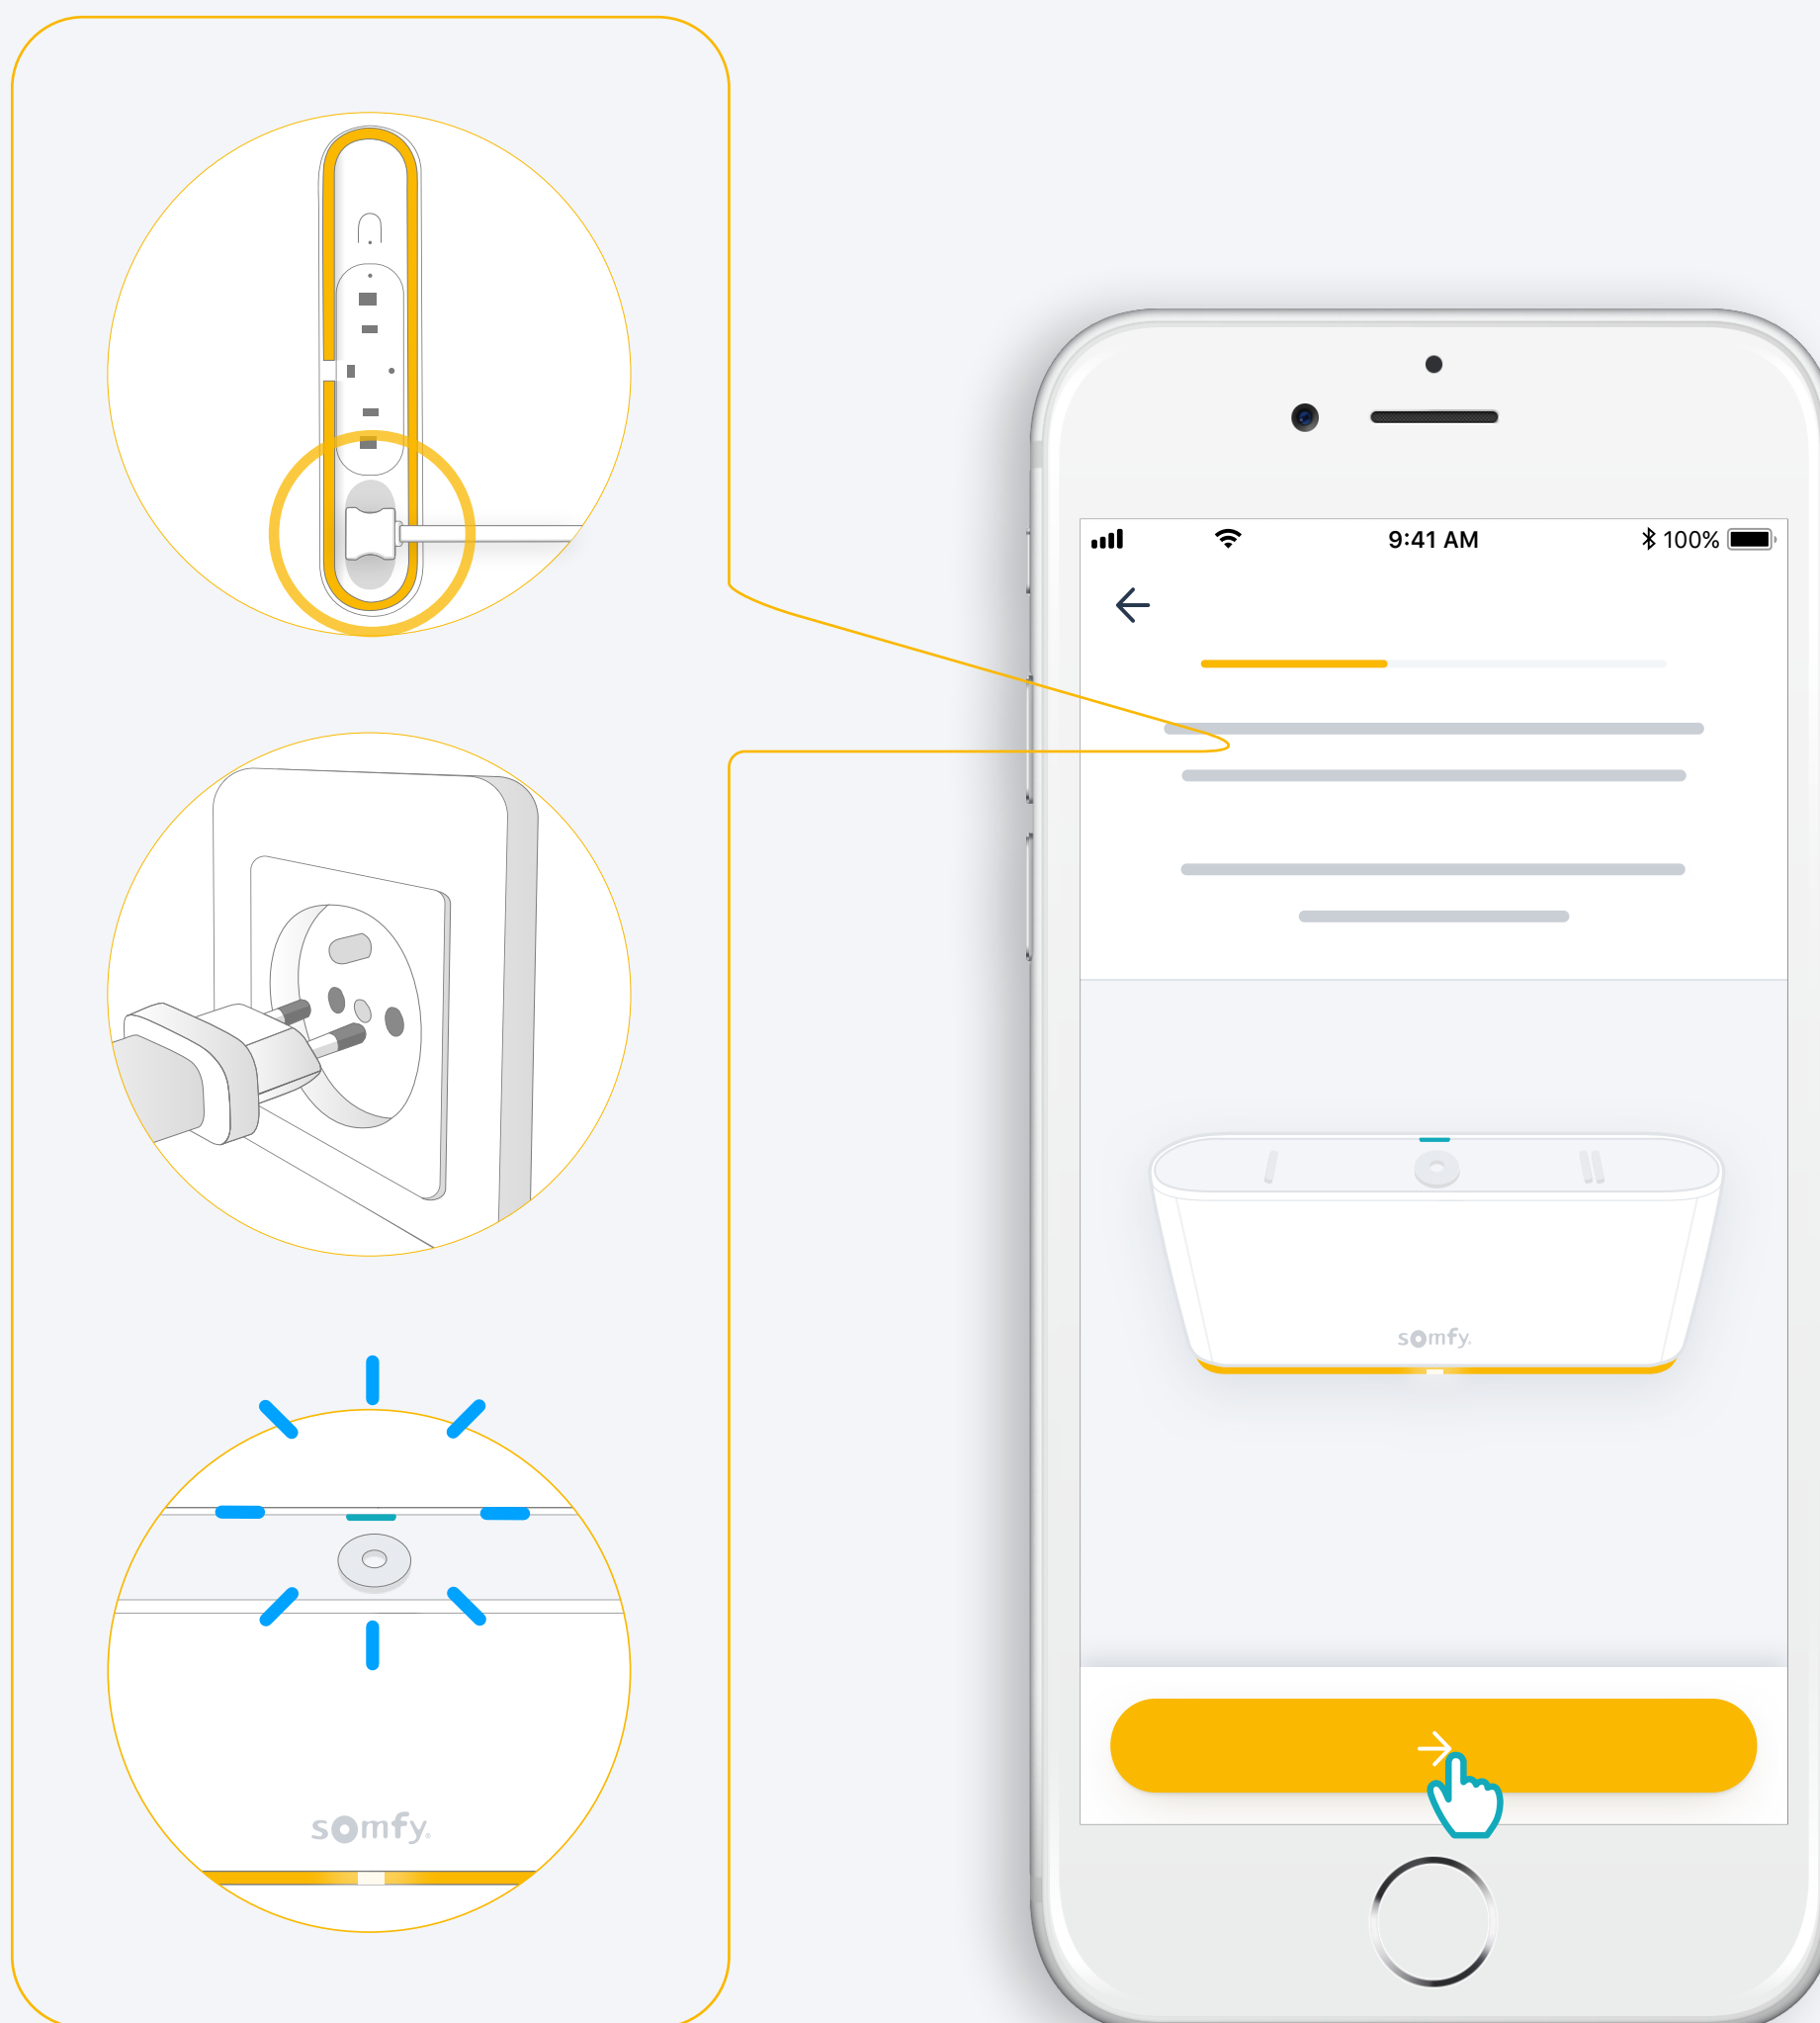


# Povežite se na Internet


Vaša WiFi mreža mora biti u rasponu 2,4 GHz i osigurana lozinkom

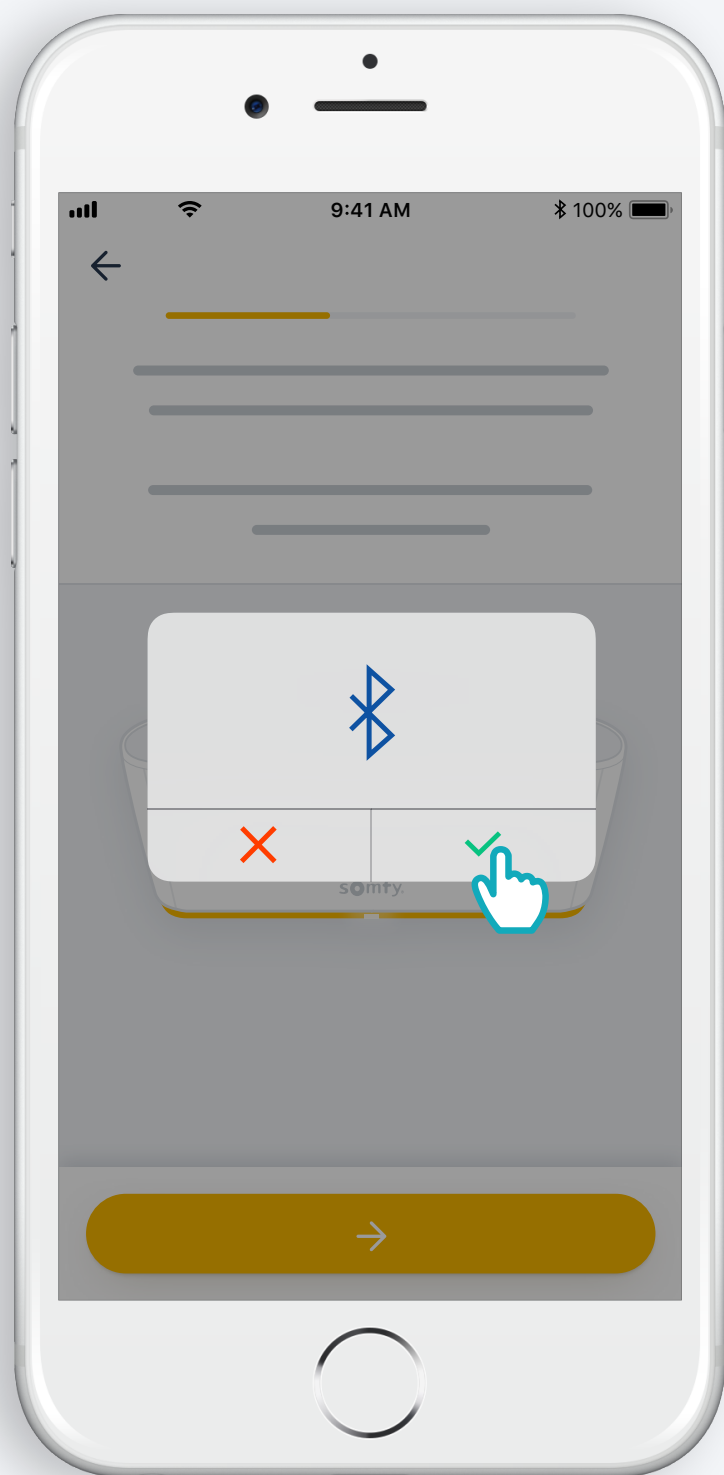

Prihvati Bluetooth

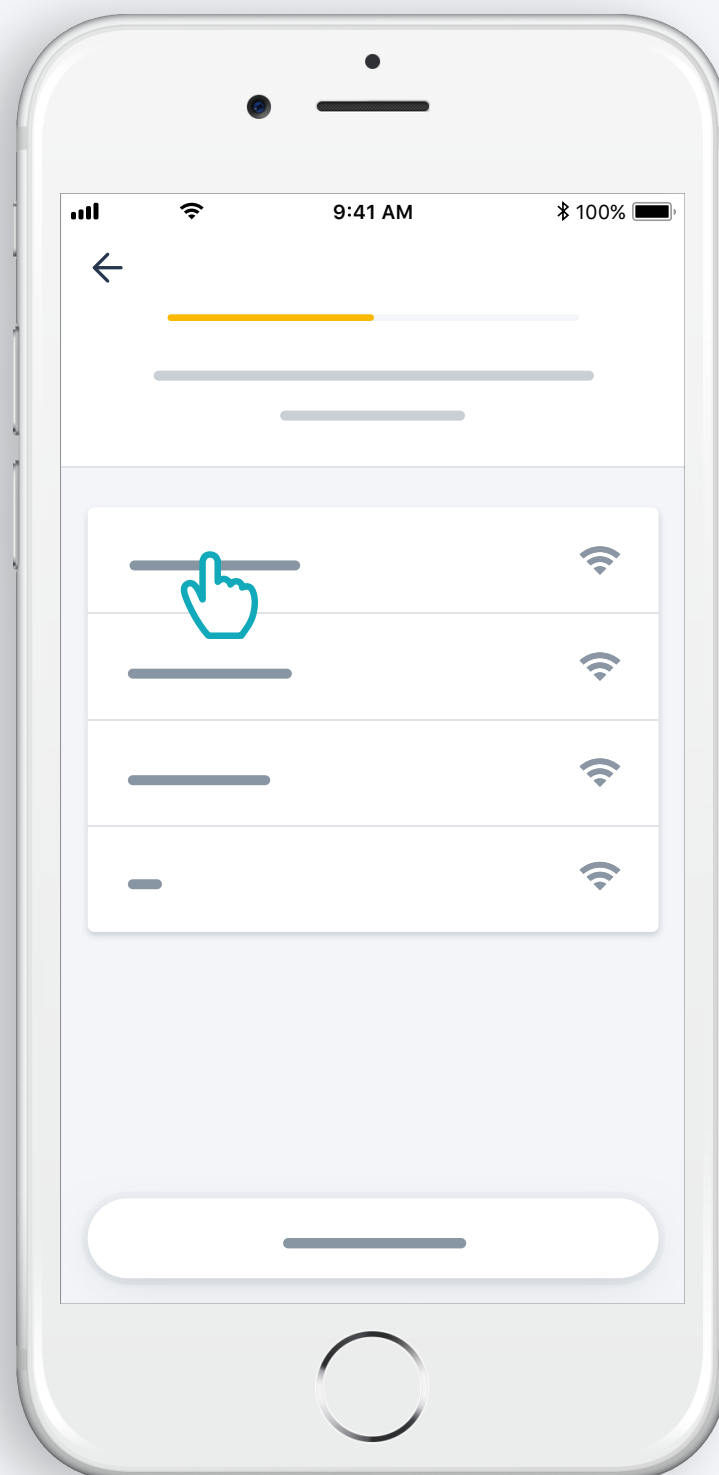


Odaberite WiFi mrežu i unesite lozinku

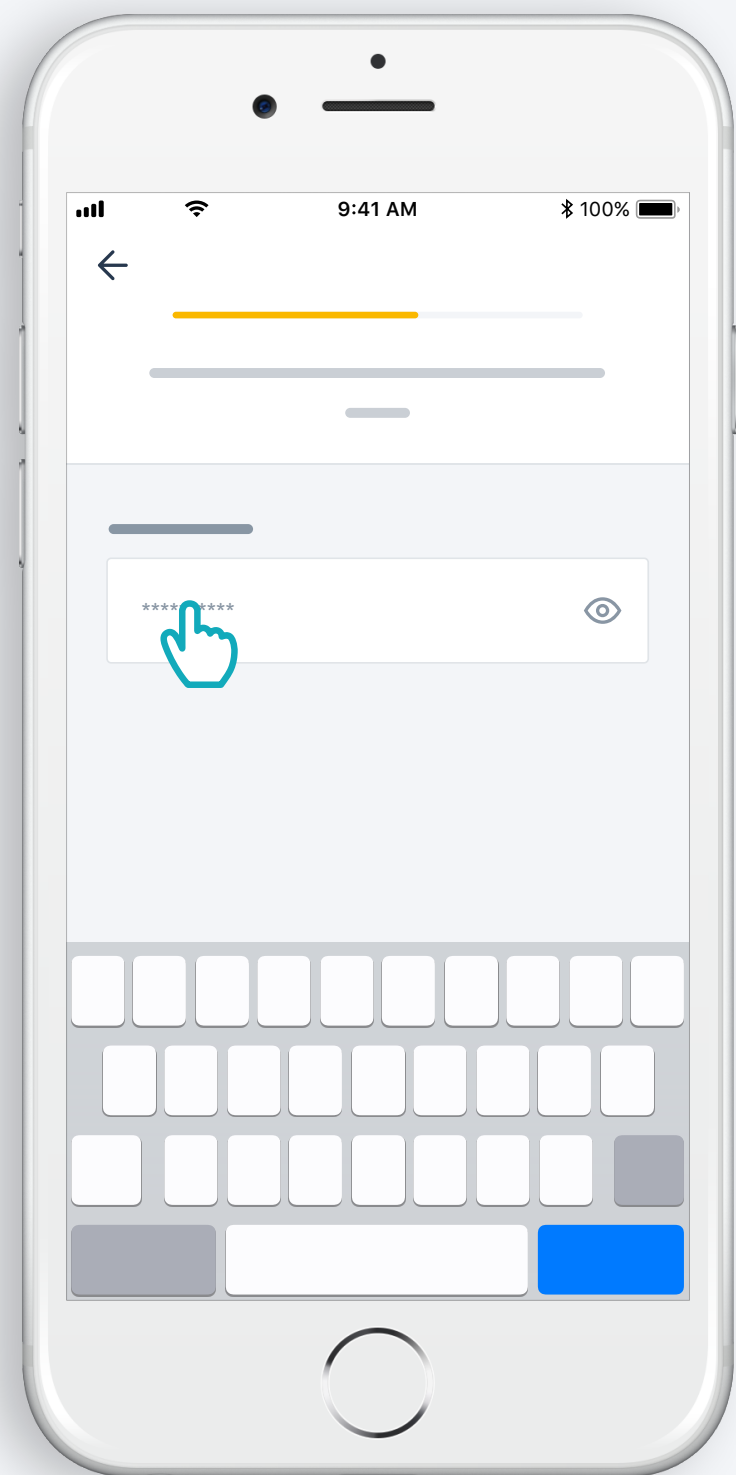


2. Izradite svoj račun za aplikaciju  
TaHoma<sup>®</sup> ili se prijavite

Izradite svoj račun za aplikaciju TaHoma<sup>®</sup>  
ili se prijavite

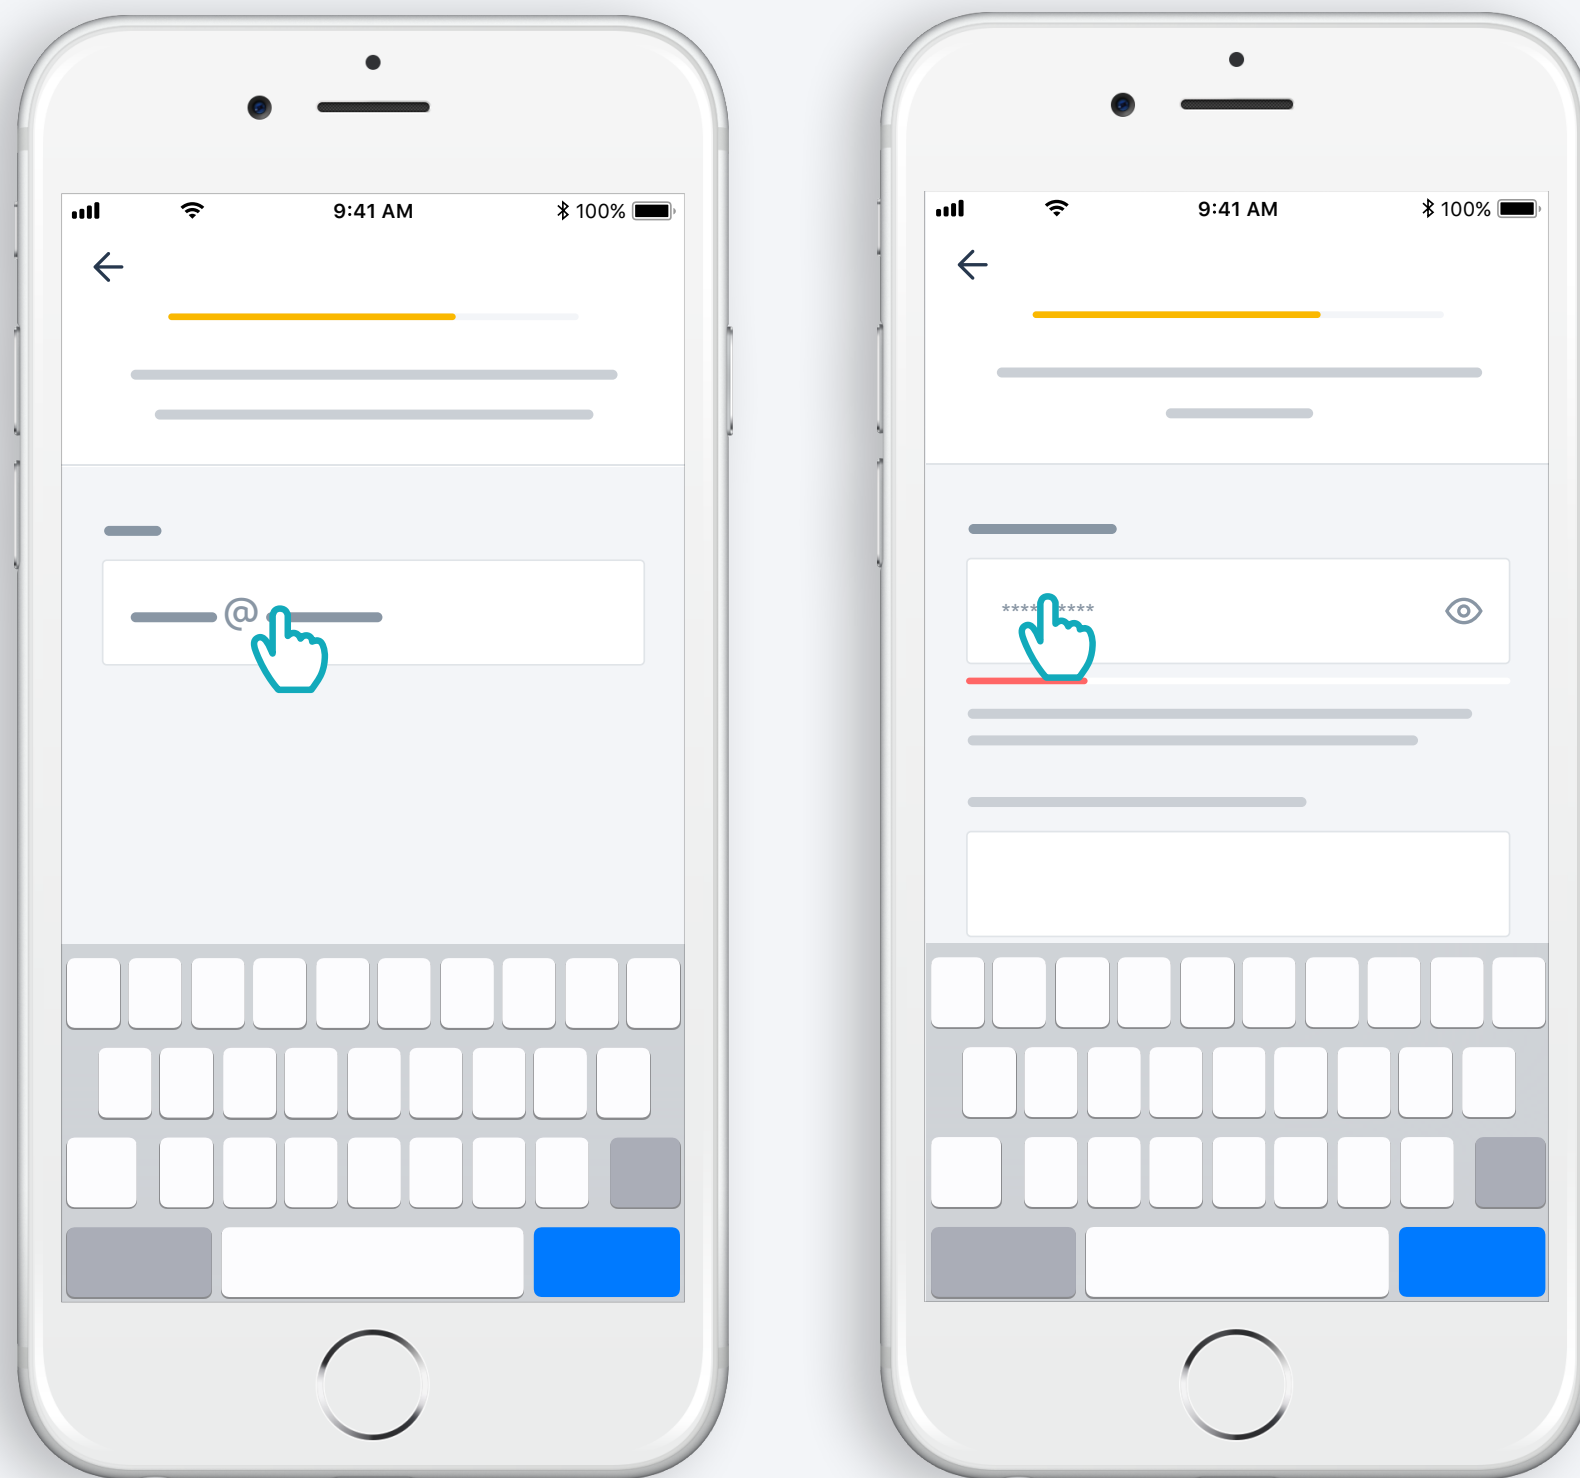


Unesite svoju adresu e-pošte i lozinku


# Slijedite upute

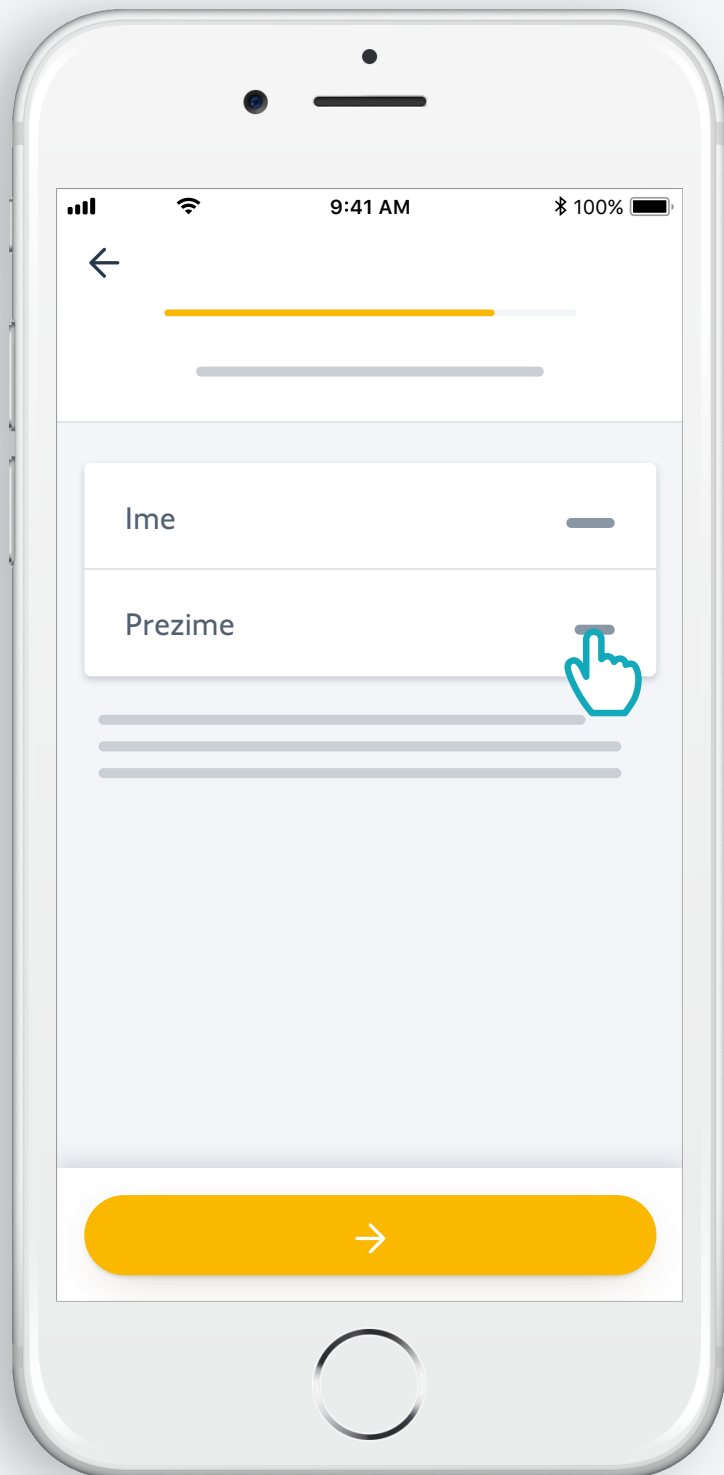

Unesite svoje ime

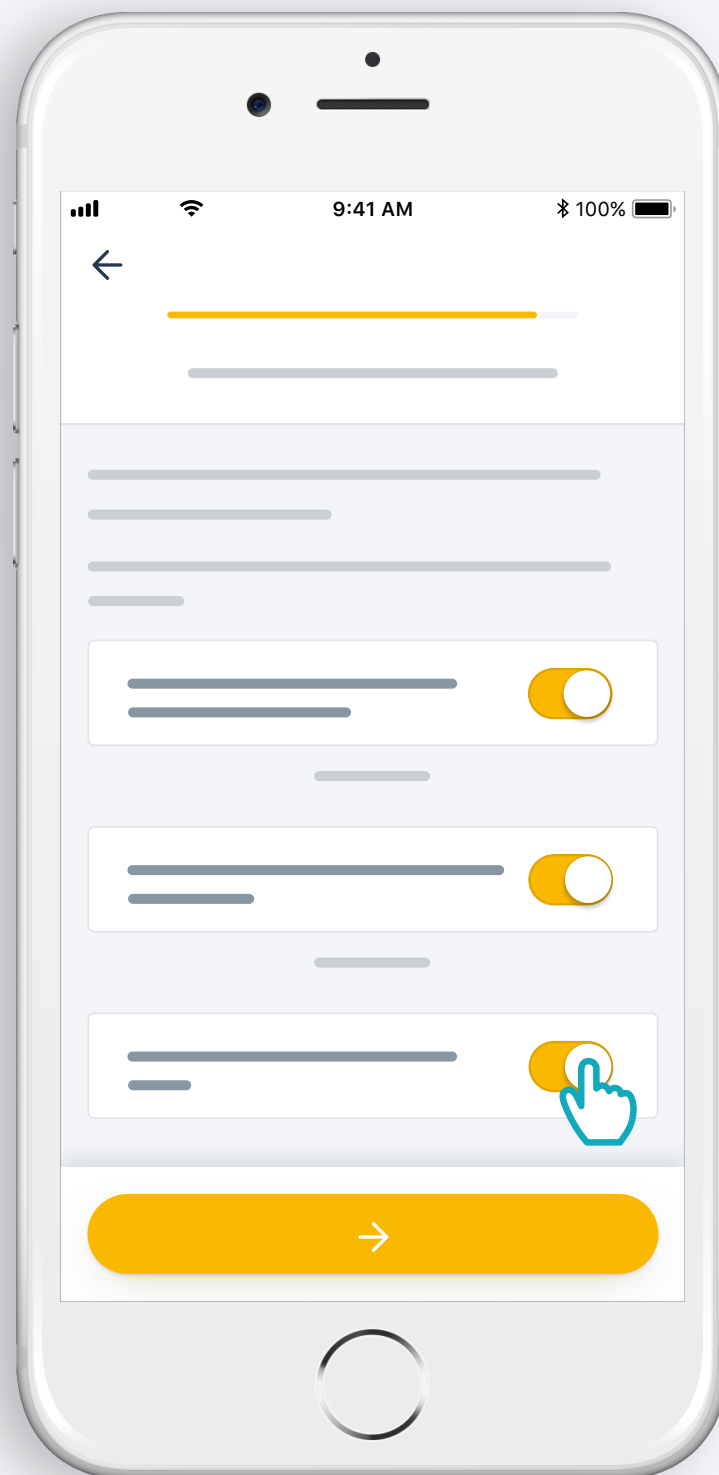


Prihvati Uvjete  
poslovanja

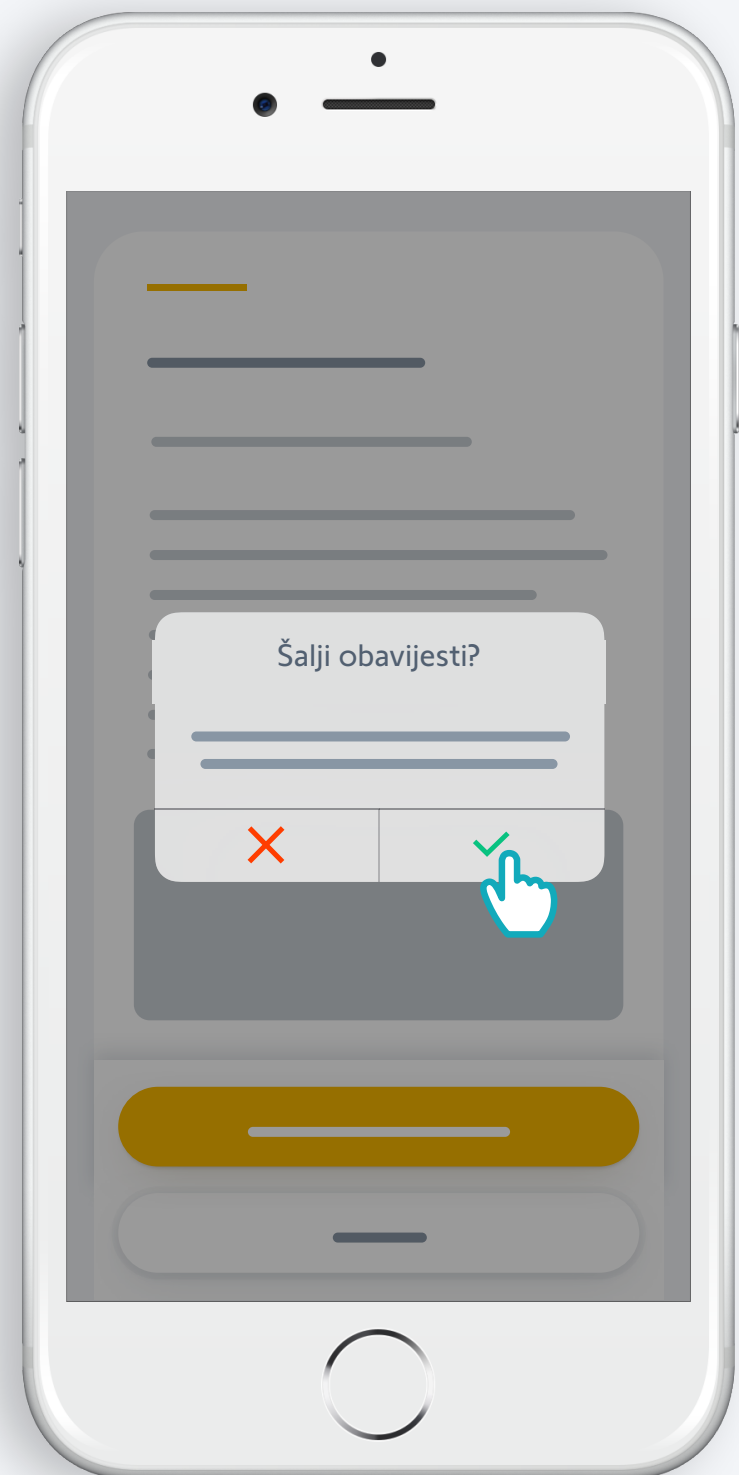

Dopustite obavijesti  
za bolje iskustvo

Čestitamo, prekidač TaHoma® Switch  
spreman je za upotrebu!

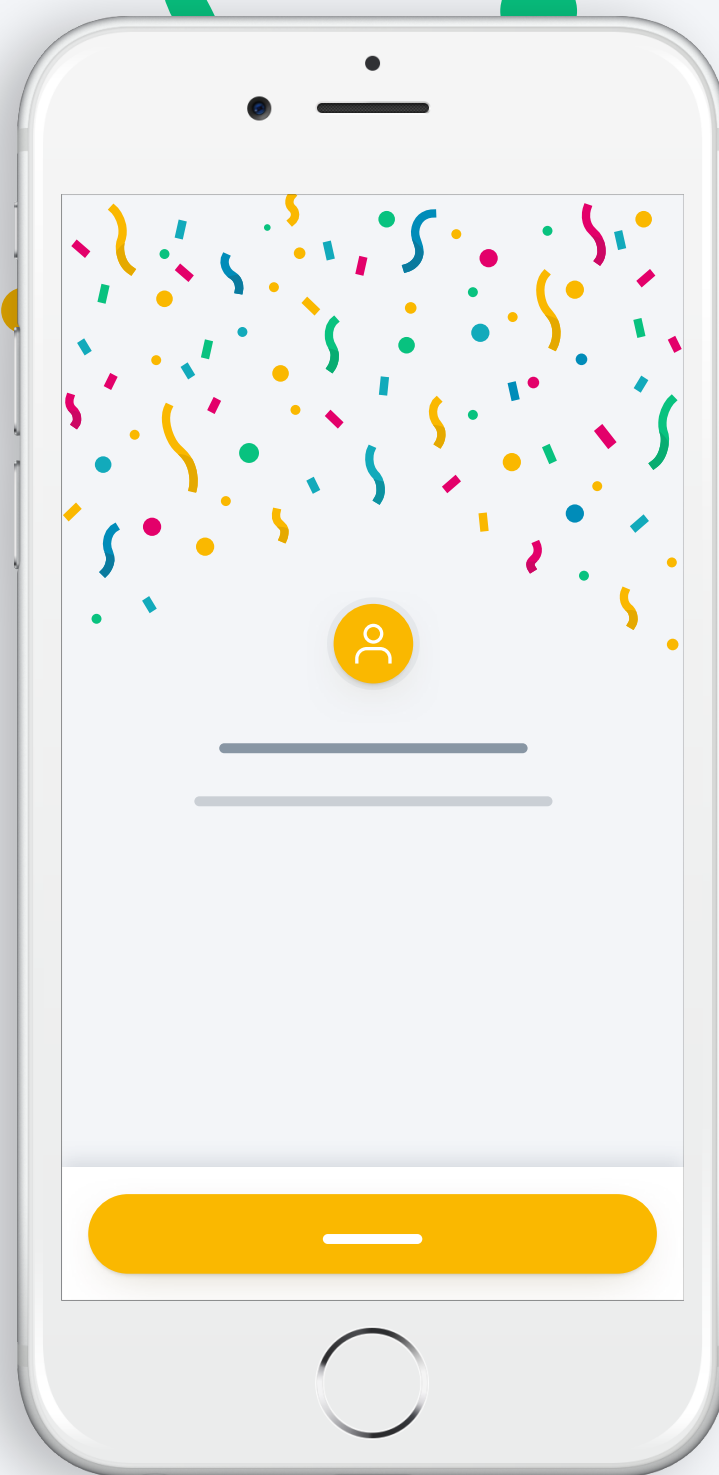

**Sada:**

- Dodajte proizvode,
- konfigurirajte gumbе prekidača TaHoma® Switch i otkrijte sve mogućnosti koje nudi aplikacija!

somfy®

5156715A